



Belt replacement

D100/D200/D300 Robotic pool cleaner





Description	Qty	Illustration
Screw 4X14 PN 2700	X4	
Cordless screw driver $\tau = 0.9 \text{ n/m}$	X1	
Ph2 Bit	X1	
Track belt PN PP00949CG	X1	

1. Take the filters out and open the bottom lid
2. Take out the 4 screws holding the side plate
3. Take out the side plate and put new belt in
4. Put back the side plate
5. Put back the 4 screws holding the side plate
only half way in
6. Place the wheels in to the side plate
7. Close the 4 screws holding the side plate
8. Put back the bottom lid and the filters



< 00:06:00 min

Estimate time







Careful





Turn CCW





Turn CW

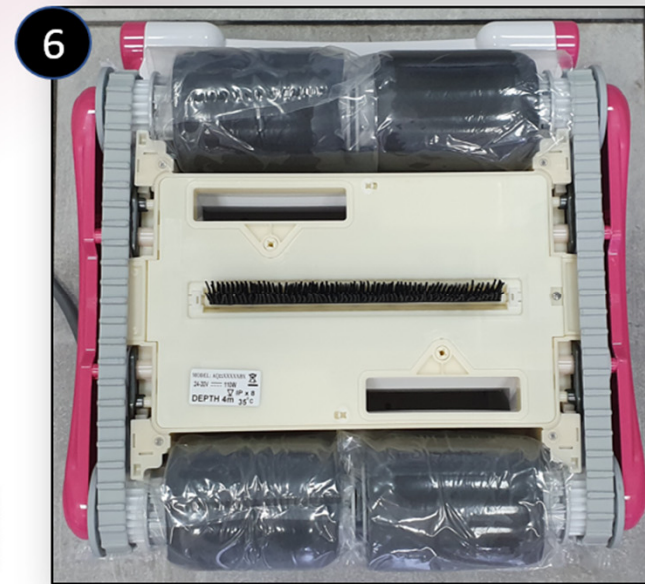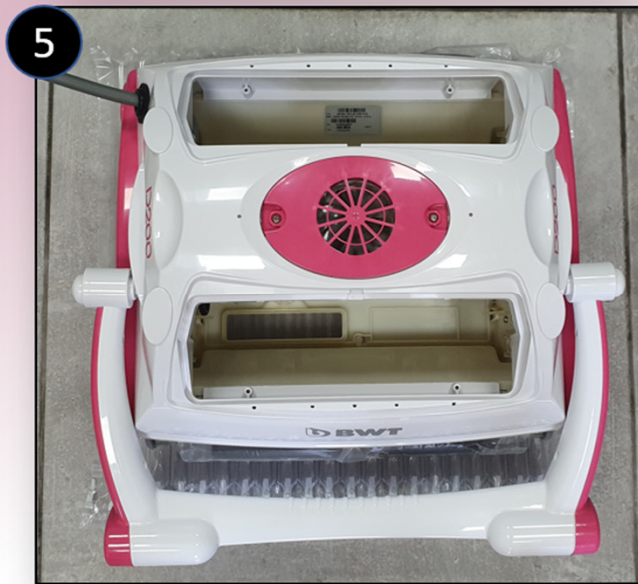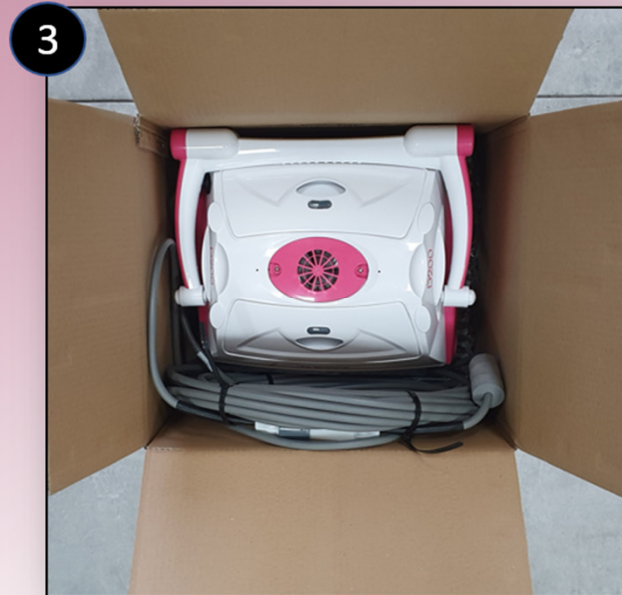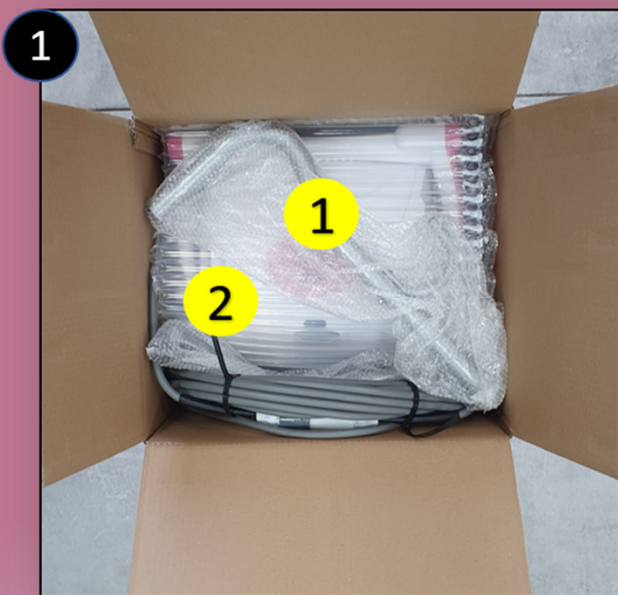


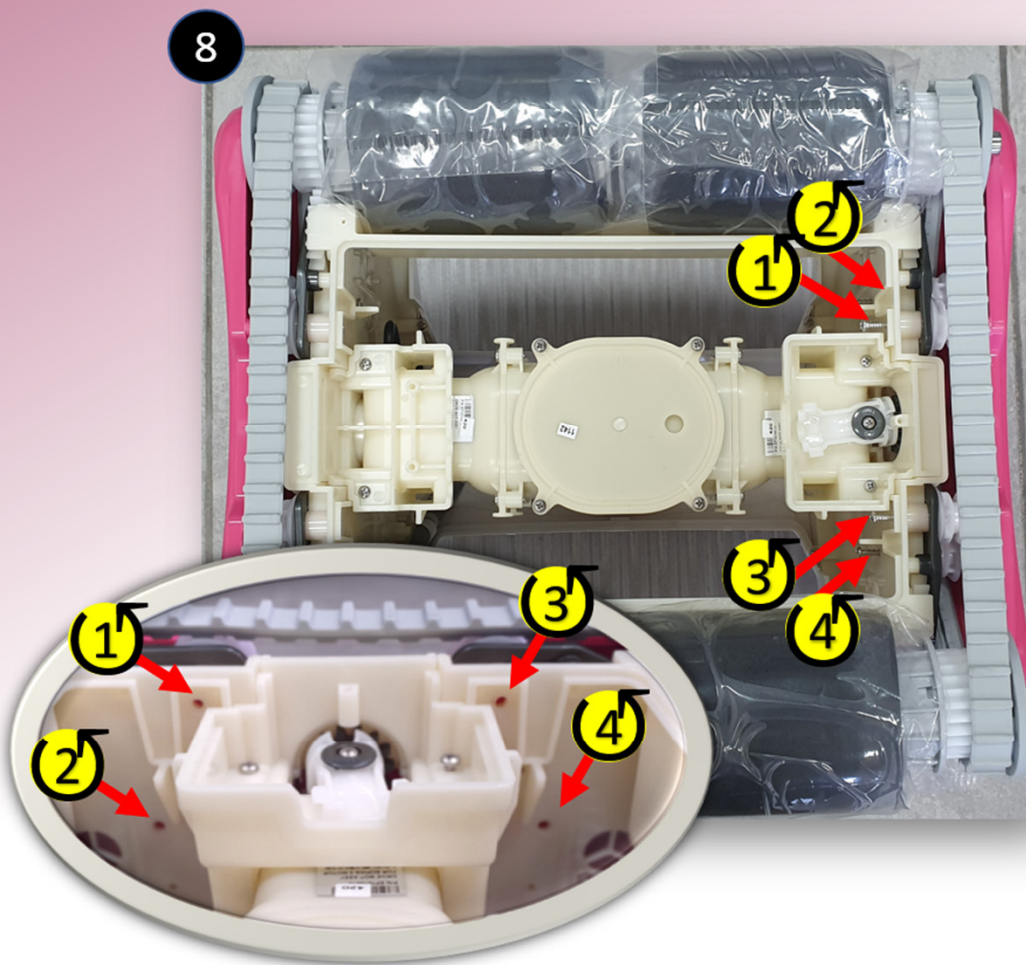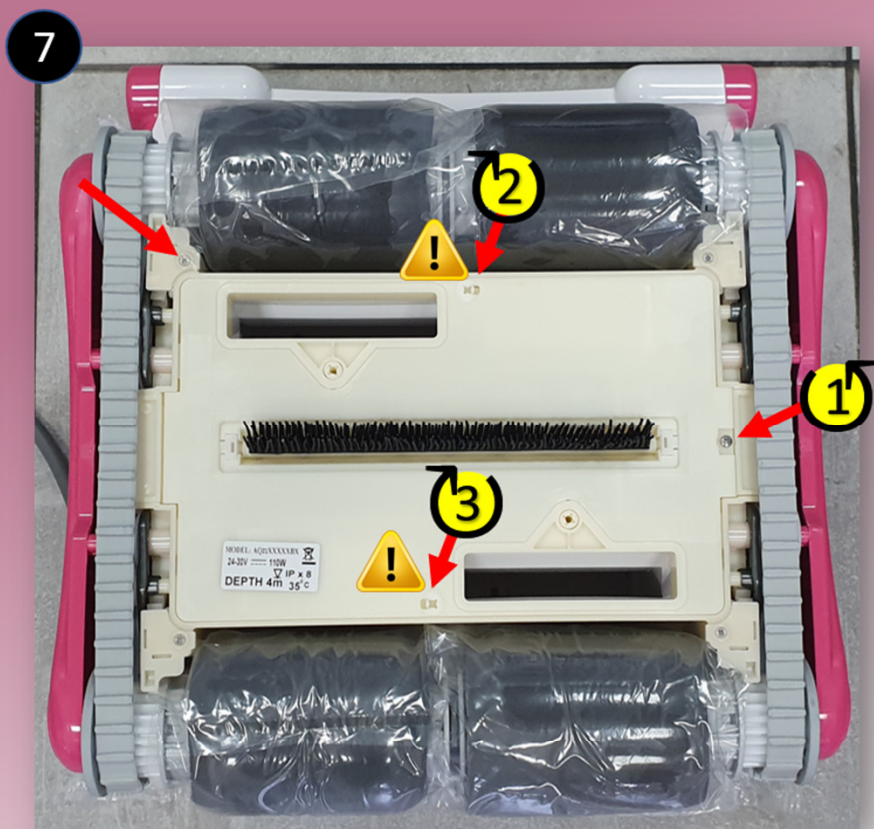

9

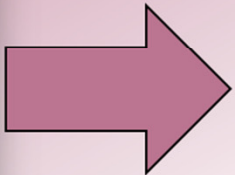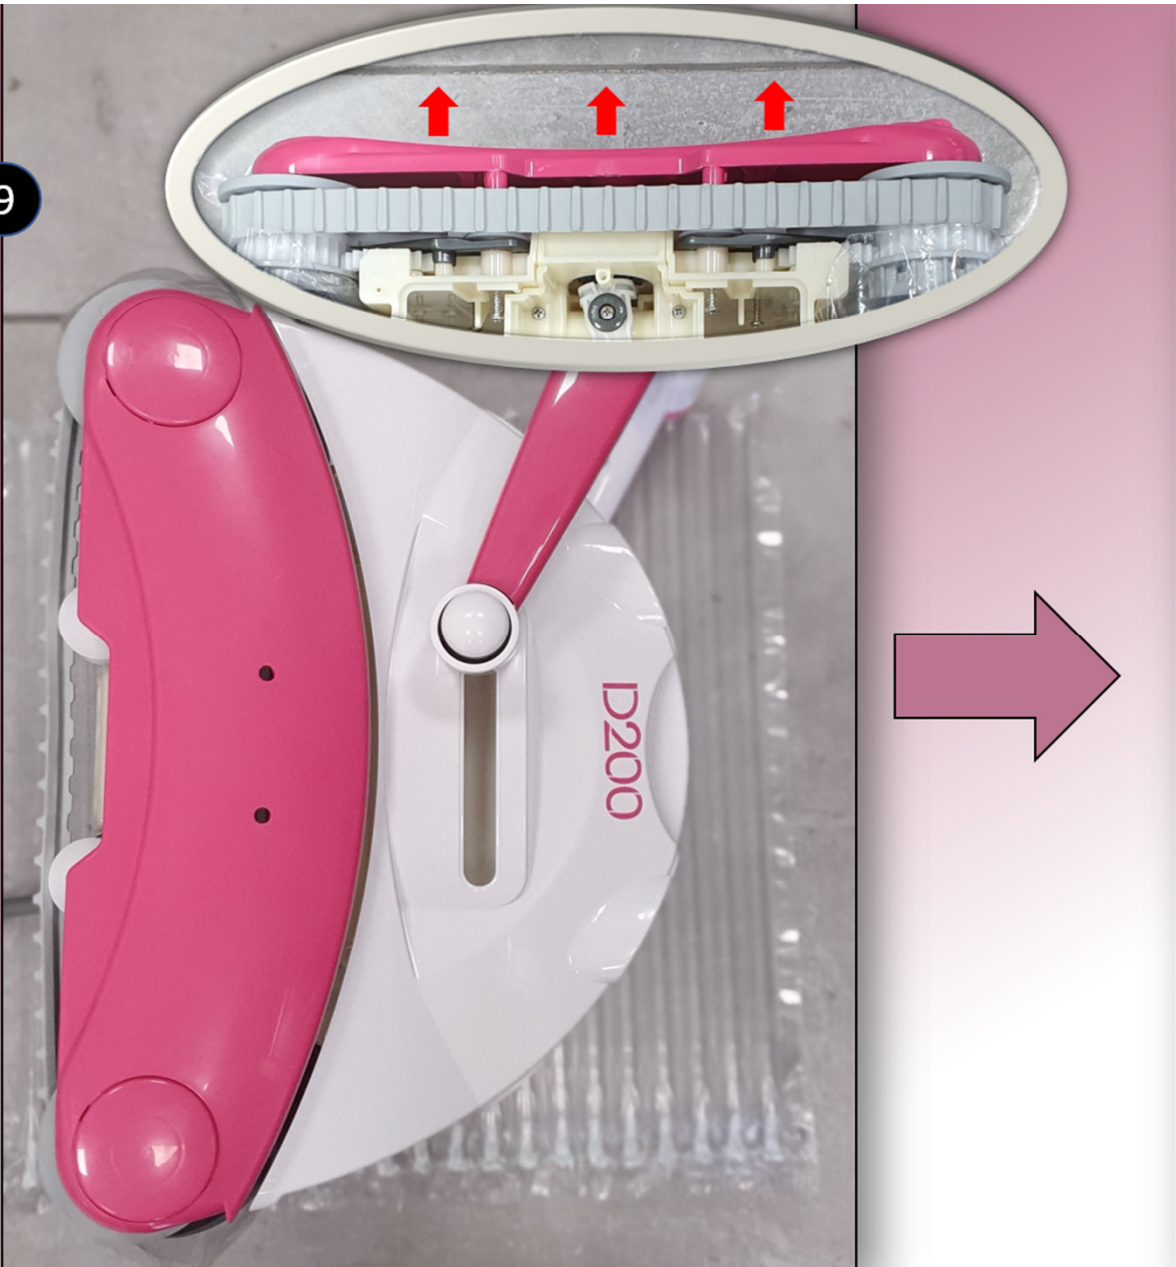


10

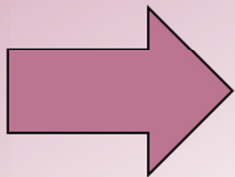



11



12

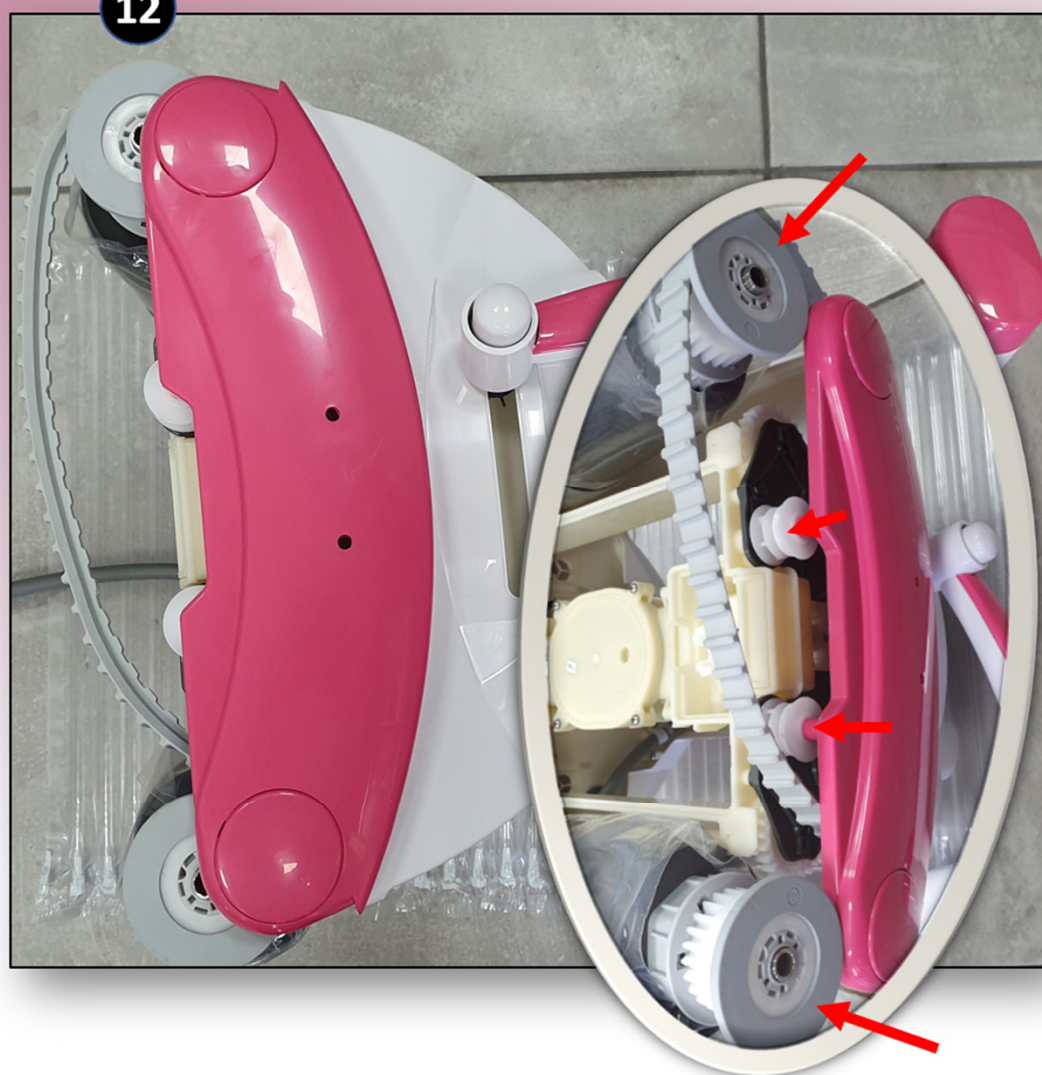


13

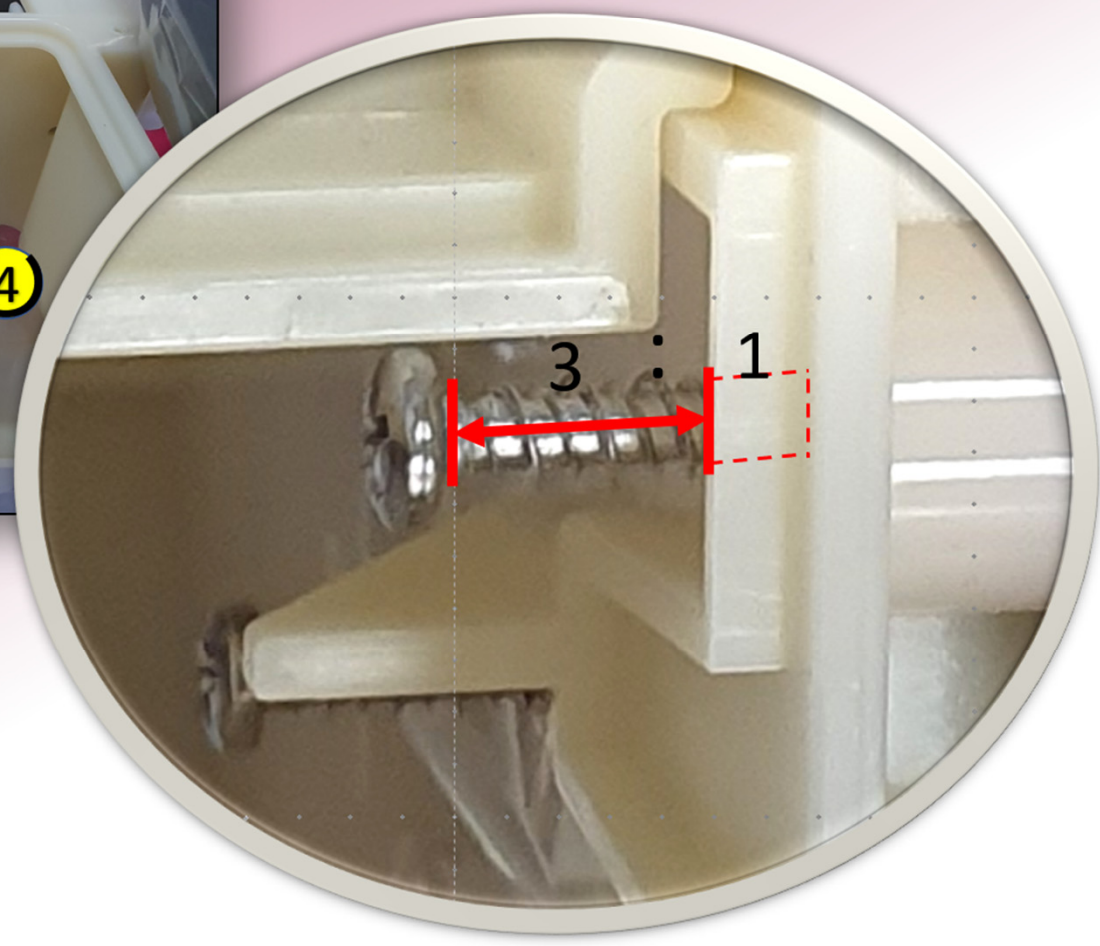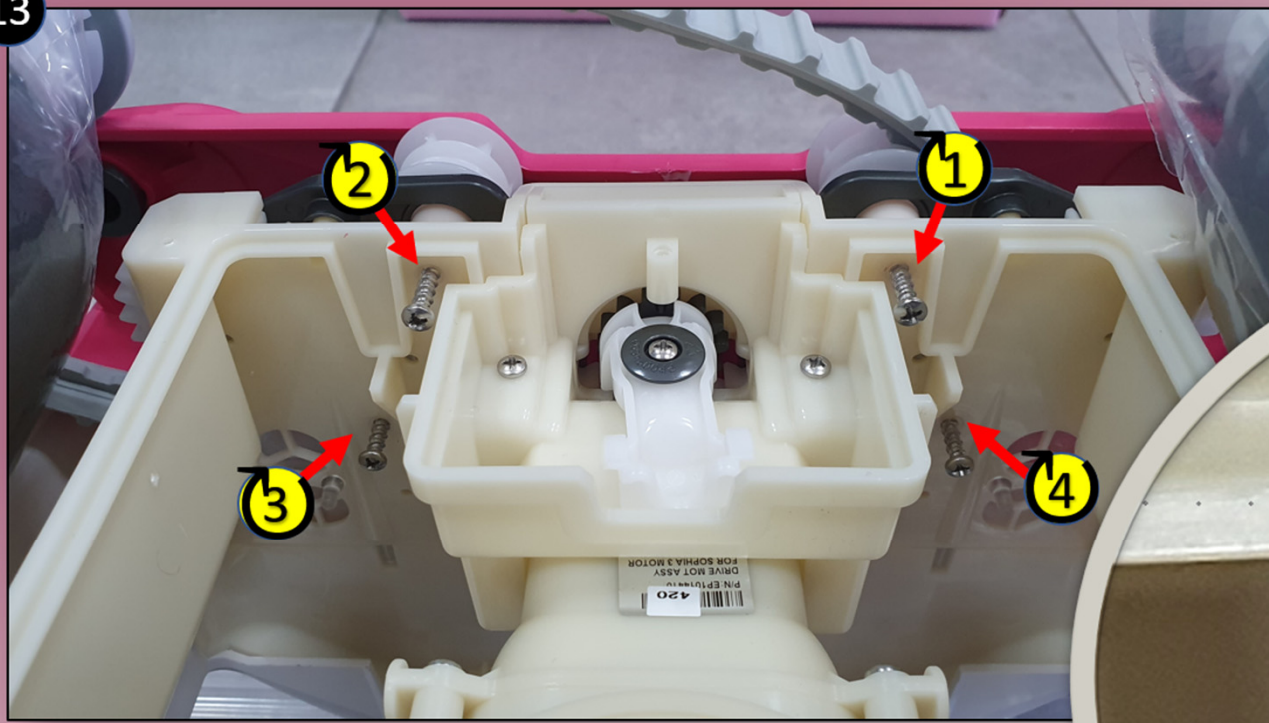

14

1


2

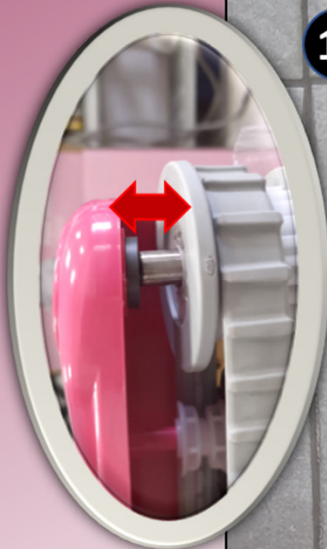


15



16

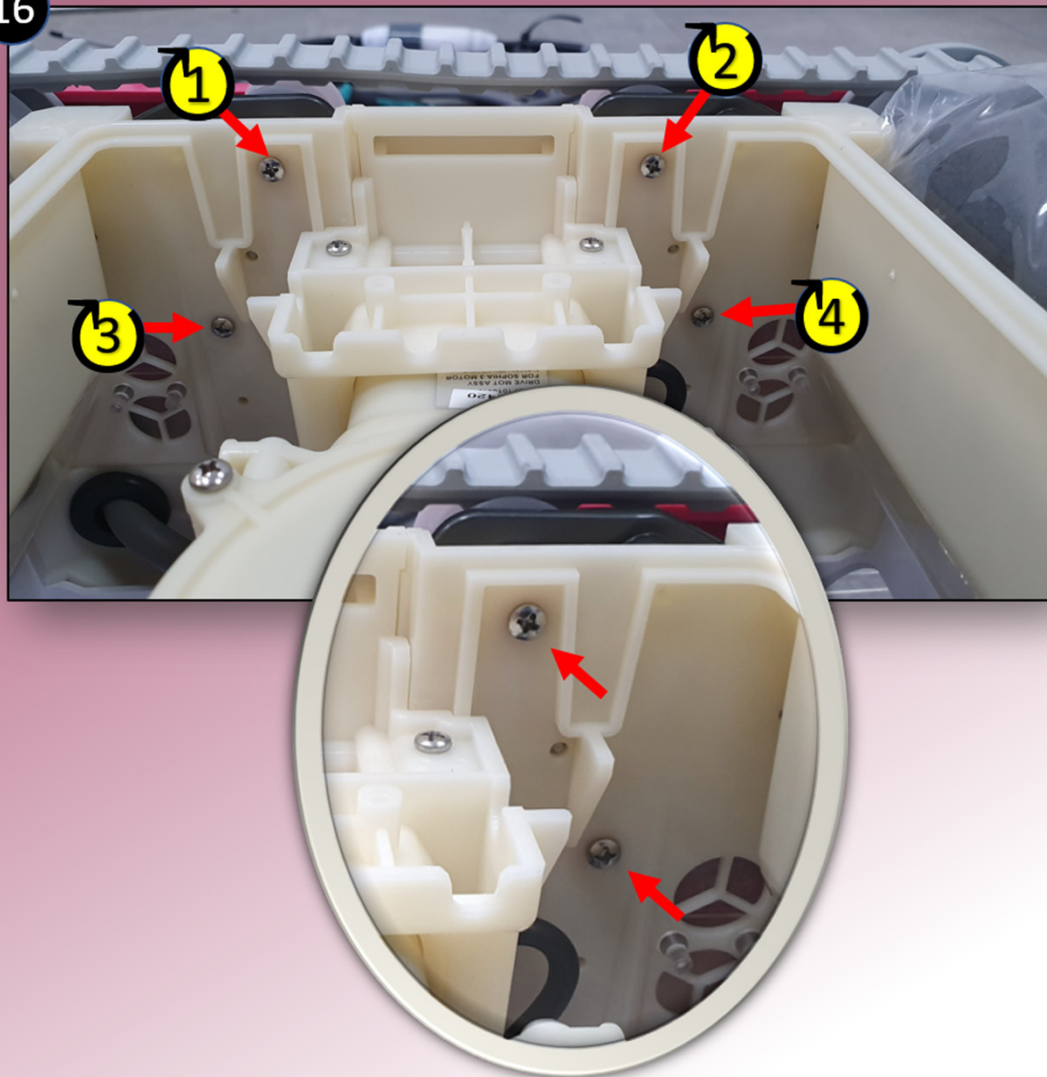

17

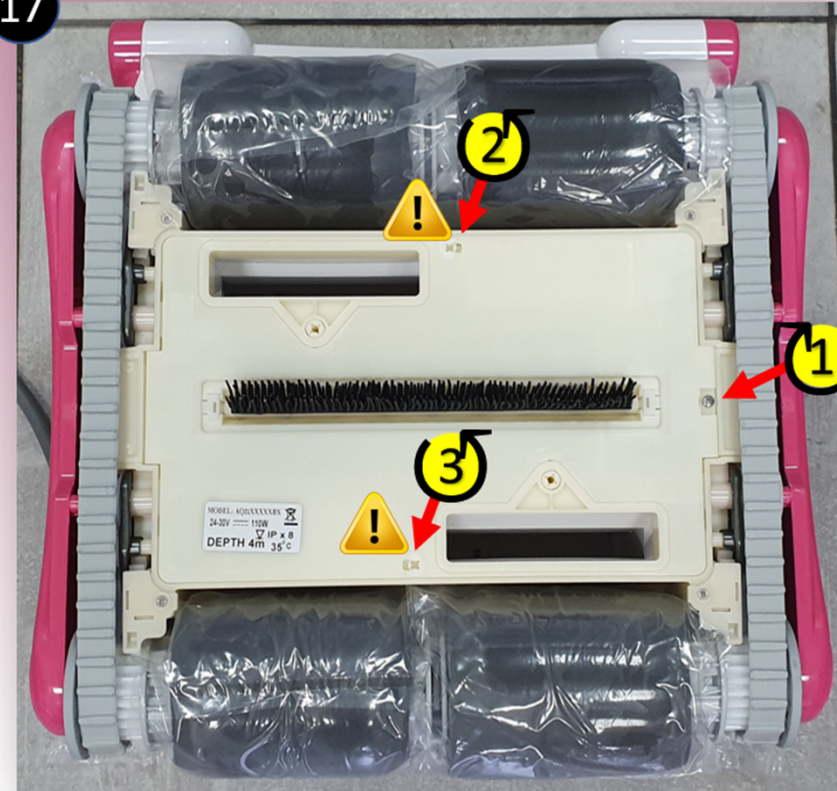

18



19



20



21

